

Kyocera ECO footPRINT Toner Recycling Program

Frequently Asked Questions

How big are the recycling boxes?

- The dimensions are 13" x 13" x 30" when assembled.

How many containers can one recycling box hold?

- A box can hold approximately 10-15 toner and waste containers, depending on the model.

What can be recycled in the ECO footPRINT recycling box?

- All Kyocera toner containers, bottles, and cartridges can be recycled through this program. Please do not include any packaging materials in the boxes.

Can new toner packaging be recycled in the box?

- No. The ECO footPRINT recycling boxes are meant only for recycling empty and waste toner containers. Packaging can be recycling in your regular recycling bins. Be sure to check with your municipality if you are unsure of what is accepted.

Can other brands be recycled in the ECO footPRINT recycling box?

- The ECO footPRINT recycling box is intended only for recycling Kyocera toner and waste containers. Please check with those respective manufacturers regarding their recycling programs.

How do I assemble the box?

- Fold the bottom flaps down and seal with packing tape. Keep the top flaps upright and open. Put the plastic liner in the box and fold the sides over the flaps to secure the liner in the box.

What do I do if I lost the plastic liner?

- You can simply line the box with a trash bag, this will keep excess toner from spilling out of the box during transit.

How do boxes get shipped back for recycling?

- Once your boxes are full, there is a pre-paid UPS label attached to the box. You can send it with your UPS driver or take it to a UPS store to ship.